


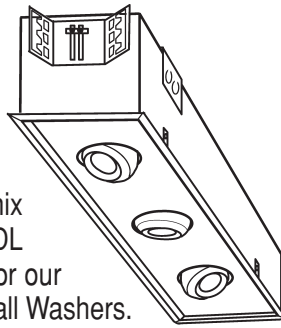

Multi-head Adjustable Accent modules with a clean closed face. Use them alone or mix and match with our DL Series Down Lights or our DW or MP Series Wall Washers.



INSTALLATION INSTRUCTIONS

**AAM SERIES
Drywall Mounting**

FOR SUPPLY CONNECTIONS ENTERING THIS FIXTURE, USE WIRE SUITABLE FOR AT LEAST 90° C

*** INSTALLATION TO BE DONE IN ACCORDANCE WITH NEC AND APPLICABLE CODES ***

1. When installing the fixtures, ALLOW AN EXTRA 3/8" wide x 1" high CLEARANCE around the fixture housing. This will allow the fixture trim to snap back on the housing after installation is complete.




2. Fixtures must be installed so that the bottom edge of the housing PROTRUDES 1/8" FROM THE FINISH SURFACE. To correct the height, adjust the mounting brackets with the screws inside the fixture housing.

3. Connect power through the cover plate or knock-outs.

4. C) Release the Ballast (Transformer)/Thermal Protector Plate by removing (2) wing nuts and maneuvering it out of the face of the fixture.



A) To access the transformer/ballast, after installation, push the spring clip at the edge of fixture to allow the face to drop down.

B) With the face down, you may remove (2) nuts at the top of the fixture to remove the Wiring Cover Plate.

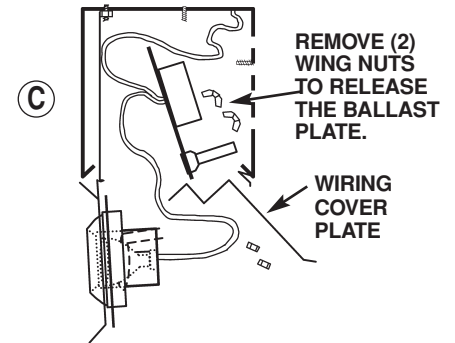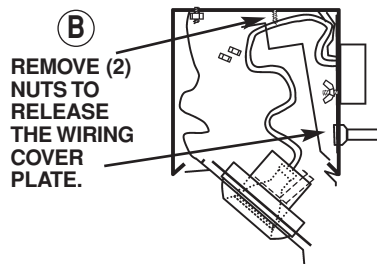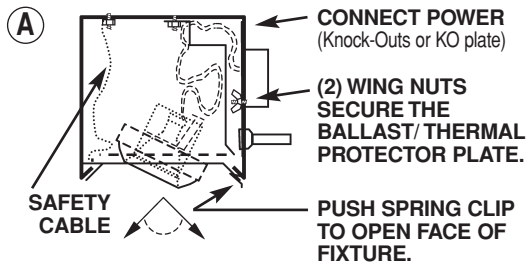

5. MR-16 LAMPS: With fixture face open, the MR-16 lamp plugs into the socket and is secured into lamp shroud with a spring clip at the back as shown.

5. PAR LAMPS: With the face open, the PAR lamp screws into the socket and is secured into lamp shroud with a lamp securing disk at the back as shown.

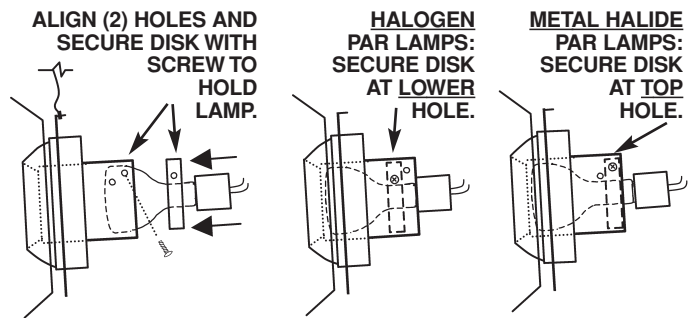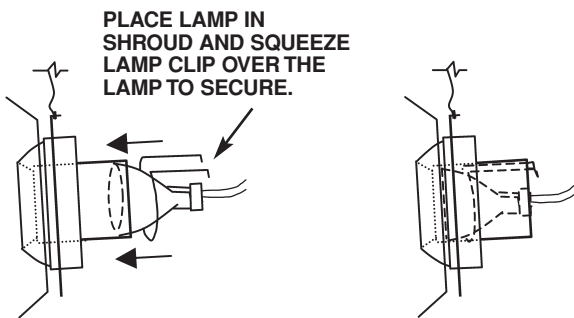

6. After installation and lamping, replace the Wiring Cover Plate and snap face of the fixture back in place, over the spring clips.

7. Fixtures are supplied with a finish trim to snap on the face of the fixture. Continuous row fixtures have "U" trims on "end of row" fixtures and (2) straight trims for center fixtures. After finish work is done, snap on the trim.

