

INSTALLATION INSTRUCTIONS

**AKTB SERIES
DWTB SERIES
MAXI-TB SERIES
MPTB SERIES
T-Bar Lay-ins**

The ideal placement of the fixtures, from the wall to the front edge is:


AKTB and MPTB Series – between 24" & 36"
DWTB Series – between 8" & 12"
MAXI-TB Series – between 48" & 66"

FOR SUPPLY CONNECTIONS ENTERING THIS FIXTURE WITHIN 3 INCHES OF A BALLAST USE WIRE SUITABLE FOR AT LEAST 90° C


*** INSTALLATION TO BE DONE IN ACCORDANCE WITH NEC AND APPLICABLE CODES ***

ALUMINUM REFLECTOR CLEANING: Clean reflector with soap & water or alcohol, i.e. Isopropyl Alcohol or other neutral PH factor solvents. Cleaning material should be non-abrasive. **DO NOT** use Ammonia & alkali solutions.


1. To remove the reflector, push in towards housing on lamp side with your hand.

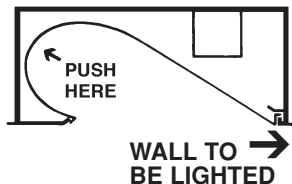


2. This will dislodge the opposite side of the reflector from the (B) ledge.

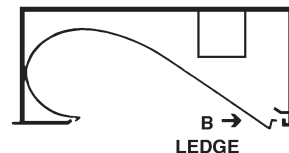


3. Pull the reflector out from dislodged side.

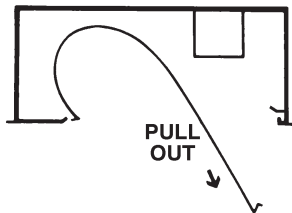


4. The flange along front and back of fixture may either sit on the T-Bar or support a ceiling tile.

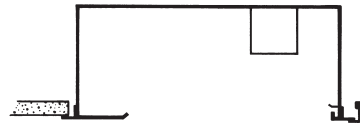

5. For most installations secure fixture to T-Bar (typical as shown). To correct fixture height, adjust the mounting brackets with the screws inside the fixture.

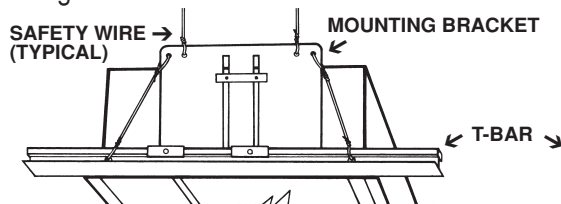

6. For end to end installations with the step-end fixture for the T-8 lamp, Hanger/Joiner brackets are required at the butting ends. Hang the fixture at the correct height then secure. (5 in row MAX.)

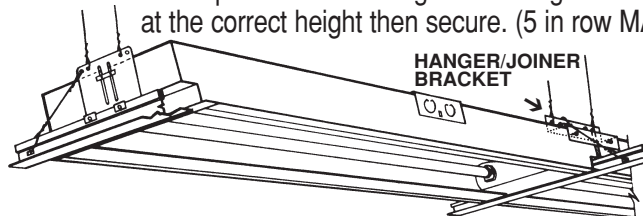


7. Attach the conduit to the K.O.s in the cover plate and make wire connections. **Note: The AKTB Series fixtures have a reversing cover plate that will allow you to make connections from the side or back of the housing.**

REPLACING THE REFLECTOR SHOULD BE THE LAST STEP AFTER PAINTING AND FINISH WORK

REMOVE THE PROTECTIVE PEEL AND REPLACE REFLECTOR.

8. Place the lamp side of reflector on (A) ledge and squeeze reflector back into housing.

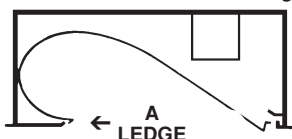

9. Push the reflector into (B) ledge.

