

# INSTALLATION INSTRUCTIONS

CL SERIES  
CLLP SERIES  
CLM SERIES  
Surface Mount Cove Lights

The **CL Series** fixtures may be spread apart 2" to 3" from the next fixture in line and still have no socket shadows. The **CLLP & CLM Series** should be placed end to end to minimize socket shadows.

FOR SUPPLY CONNECTIONS ENTERING THIS FIXTURE USE WIRE SUITABLE FOR AT LEAST 90° C.

**\* INSTALLATION TO BE DONE IN ACCORDANCE WITH NEC AND APPLICABLE CODES \***


## CL & CLLP Series:

1. To remove the reflector, push in towards housing on the lamp side with your hand.




← BACK WALL OF COVE      OPEN TO ROOM →

2. This will dislodge the opposite side of the reflector from the (A) ledge.

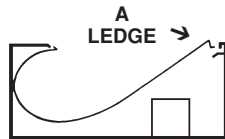


3. Pull the reflector out and you have access to the ballast.

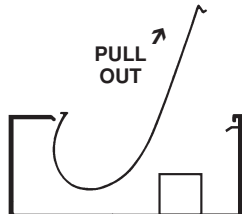


## CLM Series:

1. To remove the reflector, push the lip of the reflector opposite the lamp with your thumb, towards the lamp side of the fixture.

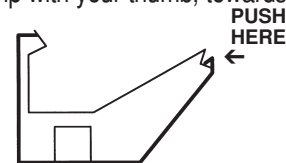


← BACK WALL OF COVE      OPEN TO ROOM →

2. This will dislodge the reflector from the (A) ledge of the fixture.

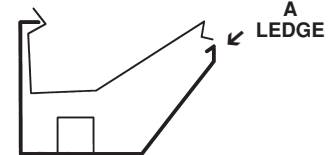

3. Pull the reflector out and you have access to the ballast.

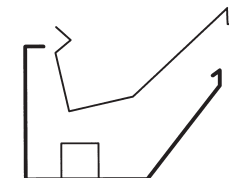


**Secure the fixture in the cove and make all wire connections.**

**REPLACING THE REFLECTOR SHOULD BE THE LAST STEP AFTER PAINTING AND FINISH WORK.**

## REPLACE THE REFLECTOR


4. Place the lamp side of reflector on (B) ledge and squeeze the reflector back into the housing.

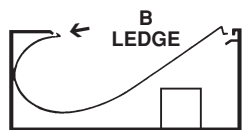

5. Push the reflector into (A) ledge, then lamp the fixture.



4. Place the lamp side of reflector on (B) ledge and squeeze the reflector back into the housing.

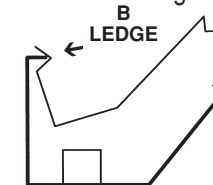

5. Make sure that the reflector is seated properly on (A) ledge, then lamp the fixture.

