




Multi-head Adjustable Accent modules with a clean closed face. Use them alone or mix and match with our DL Series Down Lights or our DW or MP Series Wall Washers.

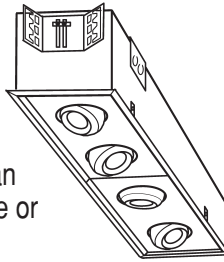

INSTALLATION INSTRUCTIONS

AAM SERIES Drywall Mounting


FOR SUPPLY CONNECTIONS ENTERING THIS FIXTURE USE WIRE SUITABLE FOR AT LEAST 90° C

*** INSTALLATION TO BE DONE IN ACCORDANCE WITH NEC AND APPLICABLE CODES ***


- When installing the fixtures, **ALLOW AN EXTRA 3/8" wide x 1" high CLEARANCE** around the fixture housing. This will allow the fixture trim to snap back on the housing after installation is complete.
- Fixtures must be installed so that the **bottom edge of the housing PROTRUDES 1/8" FROM THE FINISH SURFACE**. To correct the height, adjust the mounting brackets with the screws inside the fixture housing.

MR-16 Lamps:

- Connect power through the cover plate or knock-outs. To access the spring clip, after installation, push the spring clip at the edge of the fixture to allow the face to drop down.

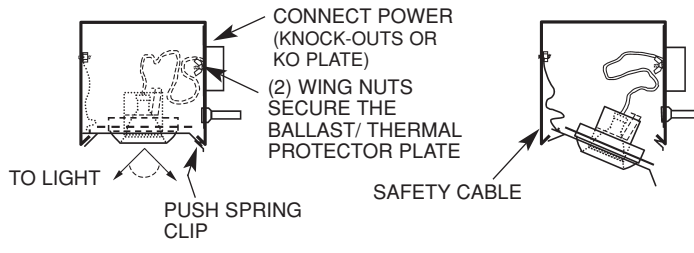


- Release the Ballast/Thermal Protector plate by removing the wing nuts and maneuvering out of the face of the fixture. MR-16 lamp plugs into socket and slides into lamp shroud. Squeeze lamp clip over lamp to secure. After all finish work is done, snap on the trim.

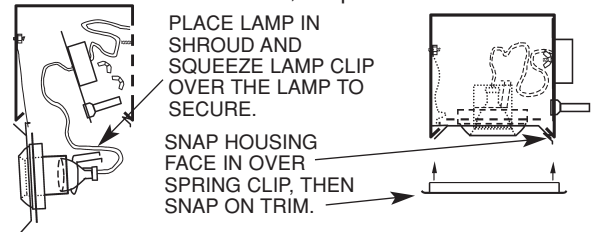


Halogen Par Lamps:

- Connect power through the cover plate or knock-outs. To open the fixture for service/lamp replacement, push the spring clip at the edge of the fixture to allow the face to drop down.

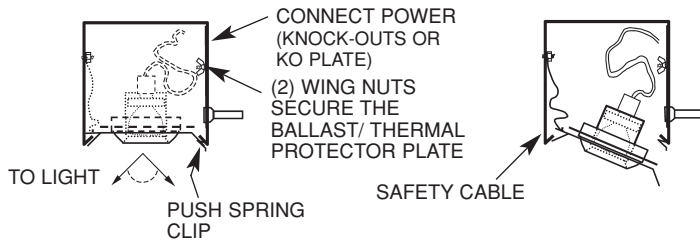


- Remove Thermal Protector plate if required by removing the wing nuts and maneuvering out of the face of the fixture. Lamp securing disk is held over lamp with screw. After all finish work is done, snap on the trim.

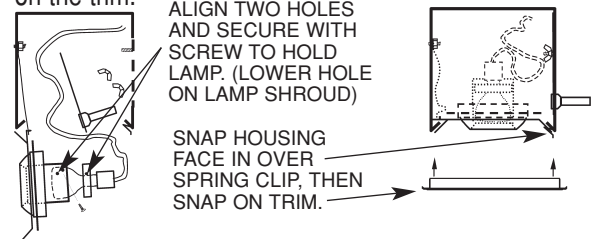


Metal Halide Par Lamps:

- Connect power through the cover plate or knock-outs. To access the ballast, after installation, push the spring clip at the edge of the fixture to allow the face to drop down.

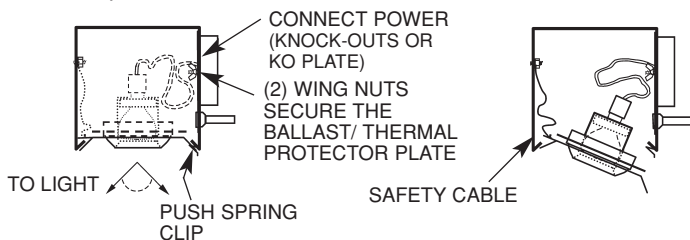

- Release the Ballast/Thermal Protector plate by removing the wing nuts and maneuvering out of the face of the fixture. Lamp securing disk is held over lamp with screw. After all finish work is done, snap on the trim.

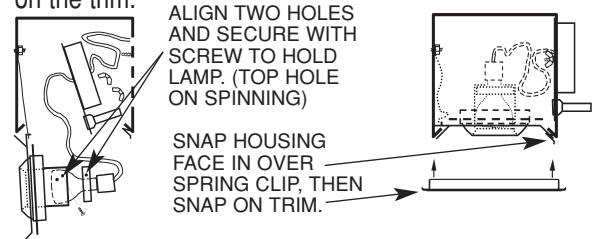

- ALL hard ceiling fixtures are supplied with a finish trim to snap on to the face of the fixture (unless they have been ordered with the trimless option). Continuous row fixtures have "U" trims on the "end of row" fixtures and (2) straight trims for the center fixtures.