

INSTALLATION INSTRUCTIONS

AA SERIES
AAD SERIES

Drywall Mounting

These recessed, multi-head Adjustable Accent lights were designed to reduce ceiling clutter in retail spaces.


FOR SUPPLY CONNECTIONS ENTERING THIS FIXTURE USE WIRE SUITABLE FOR AT LEAST 90° C

*** INSTALLATION TO BE DONE IN ACCORDANCE WITH NEC AND APPLICABLE CODES ***


- When installing the fixtures, **ALLOW AN EXTRA 3/8" wide x 1" high CLEARANCE** around the fixture housing. This will allow the fixture trim to snap back on the housing after installation is complete.
- Fixtures must be installed so that the **bottom edge of the housing PROTRUDES 1/8" FROM THE FINISH SURFACE**. To correct the height, adjust the mounting brackets with the screws inside the fixture housing.

MR-16 Lamps: (AA and AAD)

- Connect power through the knock-outs on the outside of fixture by transformer(s). After installation if you need access to the transformer, remove internal cover by removing nuts.

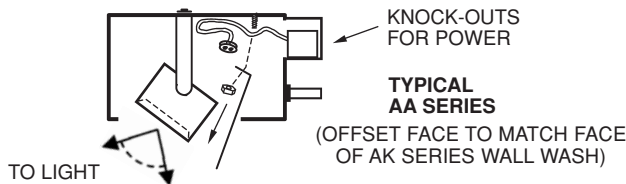


- Connect the MR-16 lamp to the socket. Then secure the lamp by sliding it into the back of the lamp shroud and then squeeze lamp clip over lamp to secure. After all finish work is done, snap on the trim.

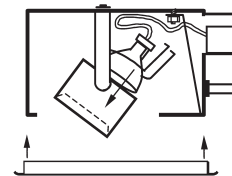


Halogen Par Lamps: (AA and AAD)

- Connect power at the knock-out plate on the outside of fixture. For access to wiring after installation, remove the lamp shroud. Loosen two knurl nut on the outside of shroud and then remove. Internal cover is removed by removing nuts.

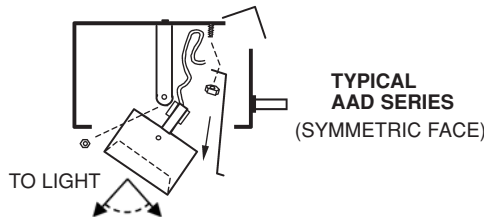


- After completing the wiring, secure the knockout plate and screw the lamp into the socket. After all finish work is done, snap on the trim.

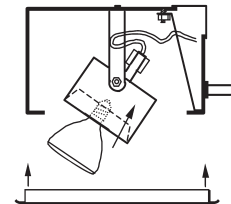


Metal Halide Par Lamps: (AA only)

- Connect power at the knock-out plate on the outside of fixture. For access to ballast after installation, remove the lamp shroud. Loosen two knurl nut on the outside of shroud and then remove. Internal cover is removed by removing nuts.

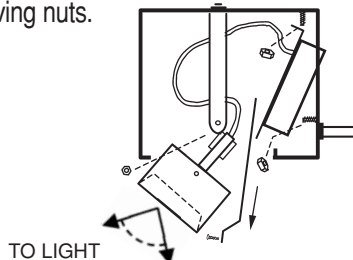

- After completing the wiring, secure the knockout plate and screw the lamp into the socket. After all finish work is done, snap on the trim.

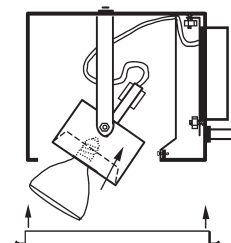

- ALL hard ceiling fixtures are supplied with a finish trim to snap on to the face of the fixture (unless they have been ordered with the trimless option). Continuous row fixtures have "U" trims on the "end of row" fixtures and (2) straight trims for the center fixtures.